



**Cool &
Warm Mist
Humidifier**
LDHM 271

INSTRUCTIONS FOR USE



L'Docile Enterprise GmbH Germany
Landshuter Allee 8 - D-80637
Munich, GERMANY



SAFETY MEASURES

- Before using the unit, read these instructions carefully and keep them for future reference.
- Make sure that working voltage of the unit corresponds to your home electricity supply.
- Place the unit on the flat, moisture-resistant surface. Distance from the walls should be not less than 15 cm.
- Do not direct the nozzle of the unit at the wooden furniture, electrical appliances, books and objects, which can be damaged by moisture.
- Do not place the humidifier in the places subjected to direct sun light, high temperatures, near computers or sensitive electronic appliances.
- Do not leave the unit unattended in closed rooms otherwise condensation can appear on the furniture and the walls, that is why we recommend keeping the door of the room, where the humidifier is used, half-opened.
- Never use the unit outdoors.
- Use only the removable parts which are supplied with the unit.
- Never allow children to use the unit as a toy.
- Close supervision is necessary when children or disabled persons use the unit.
- This unit is not intended for usage by children or disabled persons unless they are given all the necessary instructions on safety measures and information about danger, which can be caused by improper usage of the unit.
- Do not operate the unit without water. Disconnect the unit from the power supply when the water tank becomes empty.
- Do not use soda water or any perfume additives.
- Unplug the unit before removing the water tank.
- Do not cover the “steam” outlets and avoid getting of foreign objects inside.
- Do not immerse the unit into water or other liquids.
- Do not move or tilt the unit during its operation.
- Always unplug the unit and pour out water from the water tank when cleaning the unit or when you do not use it. Unplug the unit before moving it to another place.
- Do not touch the power plug with wet hands.
- Before using the unit, closely examine the power cord and make sure that it is not damaged. Do not use the unit, if its power cord is damaged.
- Do not dismantle the unit yourself, if any malfunction is detected, apply to the nearest authorized service center.
- Regularly clean the unit; do not allow cracks to appear on the sprayer.
- Keep the unit out of reach of children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that do not play with the appliance.





OPERATION

- Place the device on an even dry surface.
- Remove the reservoir and unscrew the filter, pour in clean water and tightly screw the filter fixing device.
- The volume of the water reservoir is 4 liters.
- Wipe the surface of the reservoir dry using a soft cloth.
- Place the reservoir on the base.
- Plug the device in the socket.
- Turn the regulator to turn on. The indicator light will turn on.
- Use MIST+ and MIST- buttons to adjust the strength of the steam flow.
- When the water in reservoir is out the indicator changes the color from blue to red.

CLEAN AND CARE

WARNING!

Always switch off and unplug the unit before cleaning.

Hard water causes the appearance of scale on the "sprayer", on the inner parts of the body and on the water tank; it leads to improper operation of the unit and appearance of white deposit on the interior. In order to avoid it, it is necessary to clean the sprayer every week and change water as often as possible, as well as to perform cleaning of the filter-cartridge.

If you are not going to use the unit for a long time: pour out water from the tank and the operating chamber of the "sprayer", wash the water tank, wash and clean the operating chamber of the "sprayer" and the "sprayer" itself, dry the unit carefully and take it away for storage.

WEEKLY CARE

- Once a week carefully wash the water tank and the operating chamber under the water tank with a neutral washing liquid solution. After that, carefully rinse them with water.
- Add 5-10 drops of the cleaning agent on the "sprayer"; wait about 2-5 minutes. Use the brush to remove the deposit from the surface of the "sprayer".
- Note: As a cleaning agent for the "sprayer" you can use substances for scale removal in kettles.
- Do not immerse the unit into water or other liquids.

STORAGE

Switch off and unplug the appliance.

Complete all requirements of chapter CLEAN AND CARE.

Keep assembled appliance in a dry cool place.

CLEANING THE FILTER

- Clean the filter after about 1000 l of water passed through it, and when using hard water or appearance of "white deposit" on the furniture, more often.
- Take the handle and remove the water tank from the body.
- Turn over the water tank, unscrew the lid by turning it anti clockwise and remove the filter-cartridge, by turning it anti clockwise.
- Put the filter-cartridge for 10 minutes into the bowl with vinegar, take out the filter-cartridge and wash it under tapping water.
- Place the filter-cartridge back on the lid, by turning it clockwise.



COMMON PROBLEMS & SOLUTIONS

PROBLEMS	CAUSE	SOLUTION
Indicator light does not glow	The plug is not in use and the power is off	Put the plug in the socket correctly and turn the humidifier on
Indicator light is on, air comes, but no mist out	No water in the tank	Fill the water tank with water
The mist is smelling	1. The appliance is new 2. Water is dirty	1. Wash the tank and change the water. Open the water tank and ventilate it for 12 hours 2. Wash the tank and change the water
The Indicator light is on, no mist out and no air coming	The water level is excessive high	1. Switch off the appliance and unplug it 2. Take the water tank off and unscrew the water inlet lid. Pour off some water and close the lid tightly. Wipe the tank dry with a soft cloth. Place water tank back on the base 3. Plug the humidifier in. Turn it on
The mist is poor	The energy-changeable appliance has scale or the water is dirty	Wash the energy-changeable appliance and change water



L'Docile Enterprise GmbH Germany

Landshuter Allee 8 - D-80637

Munich, GERMANY